



UNIVERSAL FLAT MAGNETIC MOUNT

3 PACK

User Manual

 
MAGNETIC MOUNT

Congratulations!

Thank you for choosing the Maxboost Universal Flat Magnetic Mount! This product is a magnetic holder for smartphones to provide a hands-free experience. It is a very slim mount that can be installed on virtually any flat surface. Please take a moment to read over this manual to learn how to properly use your universal mount.

Product Overview

1. Universal Flat Magnetic Mount x3
2. Metal Rectangle Plate x3
3. Metal Circle Plate x3
4. Adhesive Sticker x3

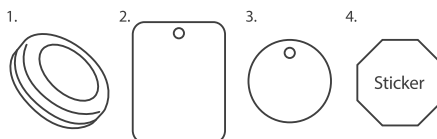


INSTRUCTIONS

Installation Instructions

1. Clean desired surface to ensure there is no debris.
2. Remove 3M sticker from Magnetic Mount.
3. Place Magnetic Mount onto the desired surface.

Secure Method:

 1. Choose to use the metal rectangle or circle plate.
2. Clean the area you intend to stick the metal plate onto (mobile device or phone case).
3. Remove 3M adhesive backing from the metal plate.
4. Firmly stick the metal plate directly onto surface.

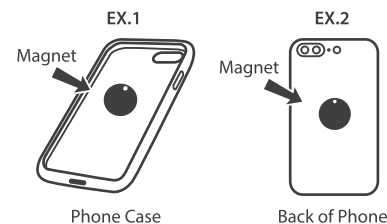

Reusable Method:

1. Choose to use either the metal rectangle or circle plate.
2. Insert the metal plate in between your phone case and mobile device without removing the adhesive cover.

 
INSTRUCTIONS

Removal Instructions

1. Apply a few drops of rubbing alcohol around the metal plate and the surrounding surface. This will help break apart the adhesive bond.
2. Obtain a thin string (such as a fishing line) and in a back-and-forth motion, slowly break apart the metal plate from the surface.
3. When possible, peel away the metal plate and roll away the remaining adhesive with your finger.

WARNING: Do not use any sharp materials to remove adhesive as it may result in scratches and damage to your devices and/or other surfaces.

NOTE: The 3M adhesive can only be used once. New adhesives may be purchased to reuse the metal plate.

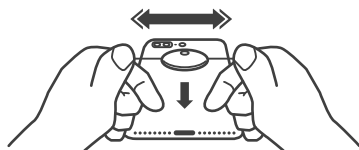

WARNINGS

Warnings

Read all the instructions before using this product. Failure to read and follow these safety instructions could result in potential hazards causing serious injury and/or property damage, for which damages you, (the purchaser), not Maxboost (the seller) is liable.

1. Do not modify, disassemble, open, drop, crush, puncture or shred the product.
2. This product is not intended for children and is not a toy. Keep out of reach of children.
3. Magnets can be harmful if swallowed.
4. Keep away from high voltage devices.
5. This product is not intended for children and is not a toy. Keep away from children. Magnets can damage sensitive objects such as pacemakers, computer hard-drives, televisions, computer monitors, credit cards, magnetic ID cards and other similar objects. Keep these objects at least 1 ft away from the magnetic car mount.
6. Ensure that all persons who use this product are familiar with the safety guidelines set forth in this manual.



WARRANTY CARD

Date of Purchase

___ / ___ / ____

Need Help?

service@maxboostpower.com
www.maxboostpower.com