


maxboost

Duraslim

PROTECTIVE CASE

maxboostpower.com


- Overview -

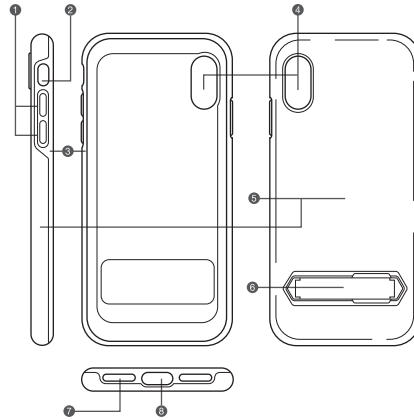


- 1 Enclosed Volume Buttons
- 2 Silence Switch Hole
- 3 Soft Outer TPU Frame
- 4 Camera Hole
- 5 Polycarbonate Backplate
- 6 Kickstand
- 7 Speaker Hole
- 8 Charging Port Hole

Installation


- 1 Begin by separating the bumper from the hard cover.

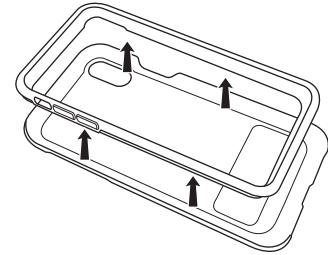


- 2 Place the phone into the bumper, aligning all buttons and ports.

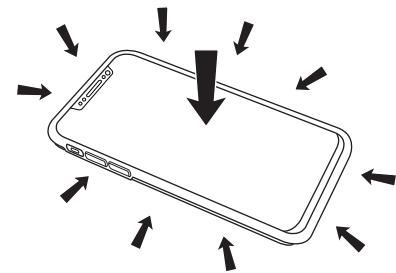

- 3 First, insert phone and bumper into the right side of the hard cover. Then, join bumper and hard cover back together. Make sure all ports and buttons are correctly aligned.

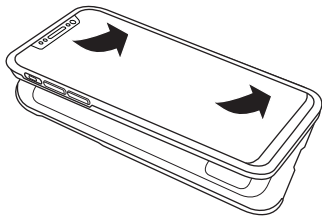


- 4 Press all around the sides and corners of the case making sure the bumper is completely sealed in.

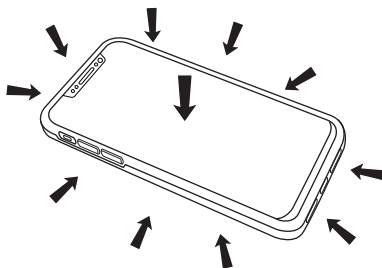


Uninstall


- 1 (Make sure to complete this step over a soft surface, such as your bed.) Gently pull away the bumper from the hard cover starting from the lower left corner.

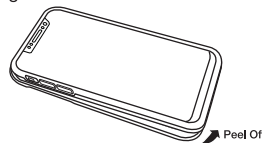

- 2 Slowly separate the bumper and hard cover, then remove the iPhone from the bumper.

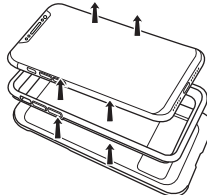

- 3 Join the bumper and hard cover back together. Make sure all ports and buttons are correctly aligned.

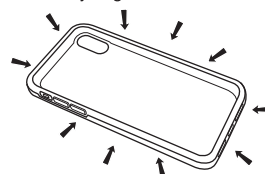

REGISTER YOUR LIFETIME WARRANTY WITHIN 14 DAYS:

@

MAXBOOST.LIFE@GMAILCOM

TITLE YOUR EMAIL
"DURASLIM LIFETIME WARRANTY"

Disclaimer: Your email will serve as the warranty application

Product carries a LIFETIME WARRANTY
If you need assistance, please visit
<http://maxboostpower.com>